



1	Beschlag		1
2	600**	350*	1
3	350*	135**	1



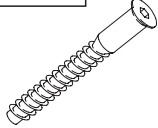
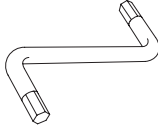
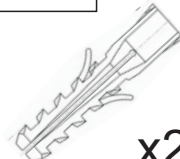

# VCM.




seit 30 Jahren  
 service@vcm-gruppe.de

## Aufbauanleitung

Artikel Badset Bandola II

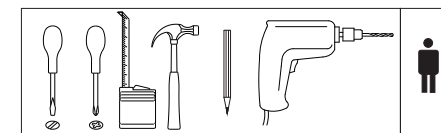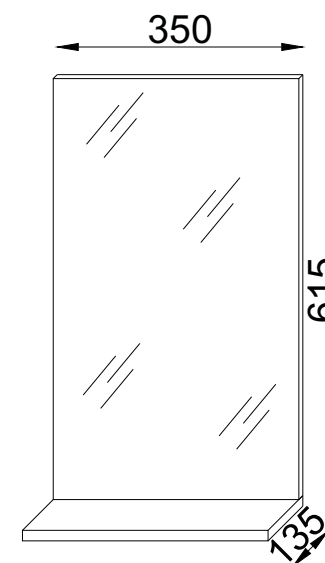
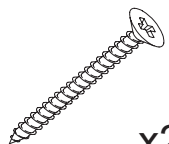
<b>1.33</b> 4x50mm  x2	<b>1.35</b>  x2	<b>1.7</b>  x2	<b>1.6</b>  x1
<b>1.36</b> 8x40mm  x2	<b>1.5</b> 3,5x16mm  x5		

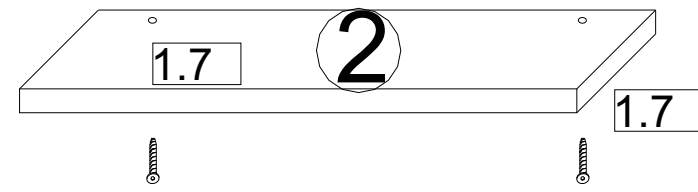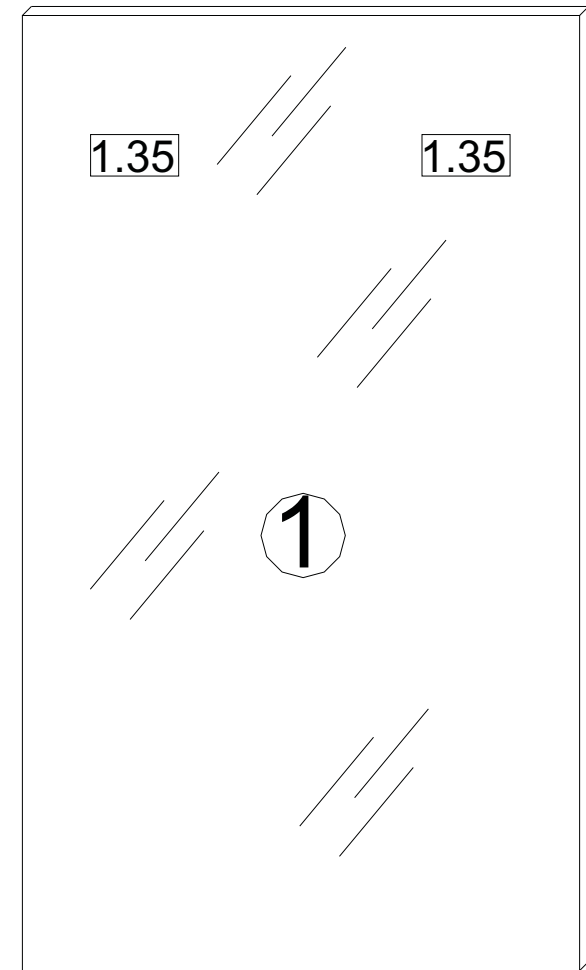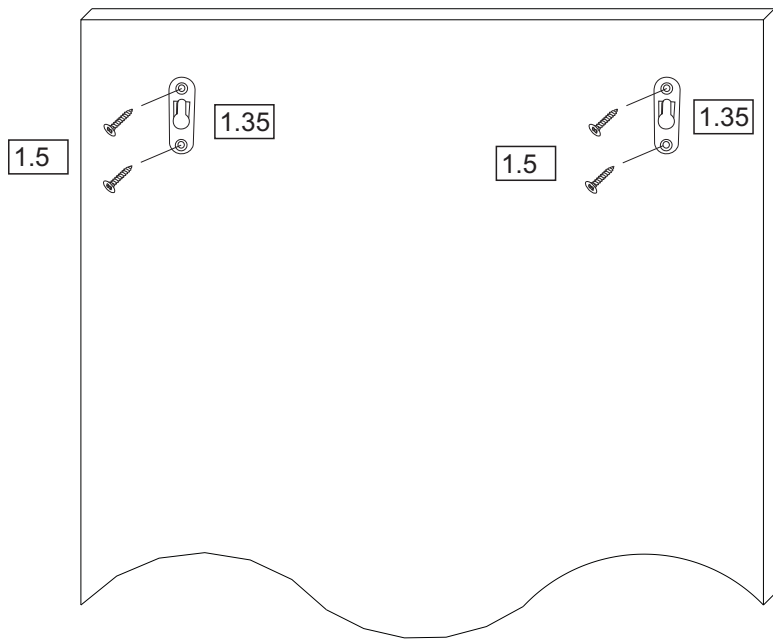

1	Beschlag		1
2	605*	296**	1
3	450*	296	1
4	450*	296	1
5	575	155	1
6	575*	296	1
7	605*	296**	1



# VCM.



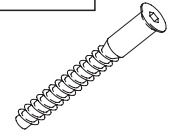


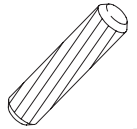
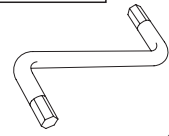
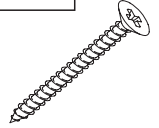

service@vcm-gruppe.de


## Aufbauanleitung

Artikel:

Badset Bandola II

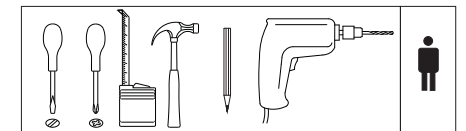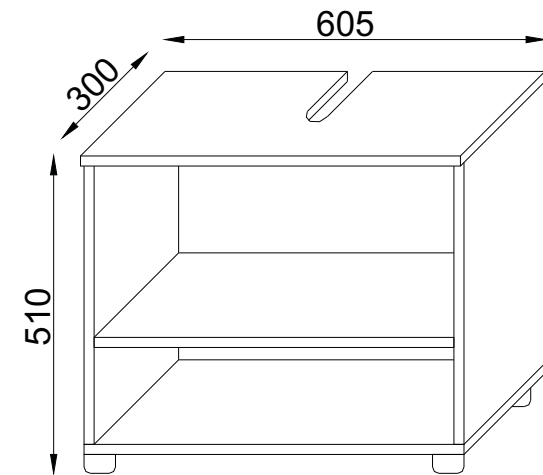

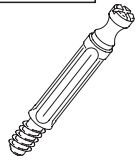1.16  x5	1.17  x5	1.7  x13	1.11  x4
1.30  x5	1.14  x2	1.6  x1	1.49 3,5x30mm  x4
1.8  x9			

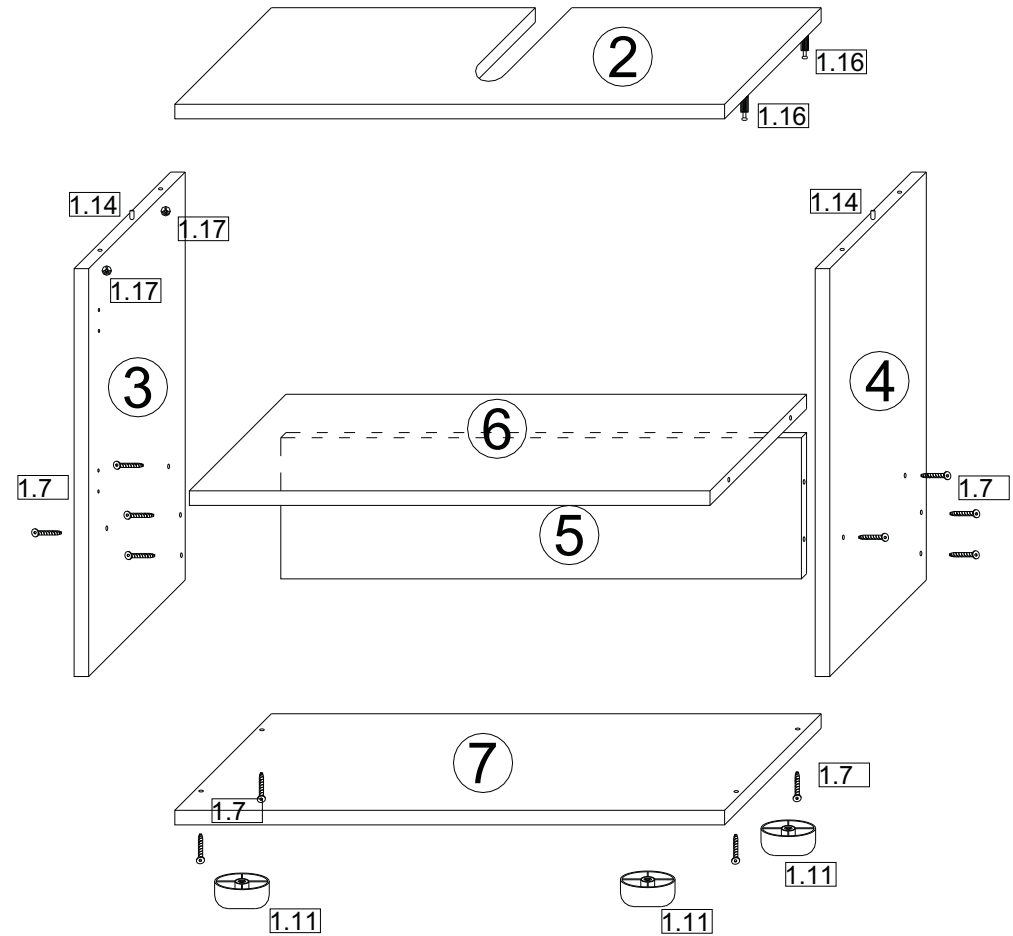

1	Beschlag		1
2	310**	296**	2
3	280**	296	2



# VCM.



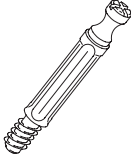




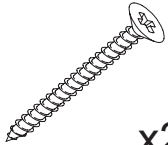
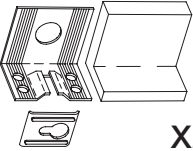
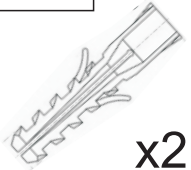
seit 30 Jahren  
 service@vcm-gruppe.de



## Aufbauanleitung

Artikel

Badset Bandola II

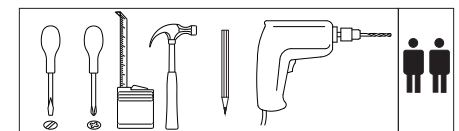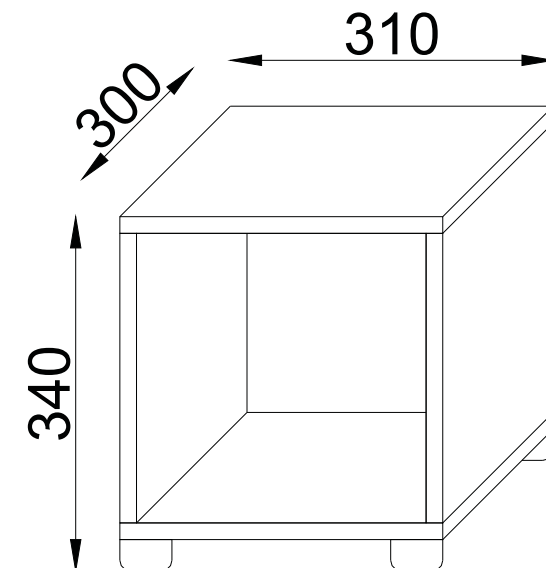
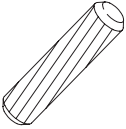
<b>1.14</b>  x9	<b>1.17</b>  x4	<b>1.16</b>  x4	<b>1.5</b> 3,5x16mm  x4
<b>1.11</b>  x4	<b>1.12</b> 4x20mm  x4	<b>1.30</b>  x4	<b>1.33</b> 4x50mm  x2
<b>1.18</b>  x2	<b>1.36</b> 8x40mm  x2		

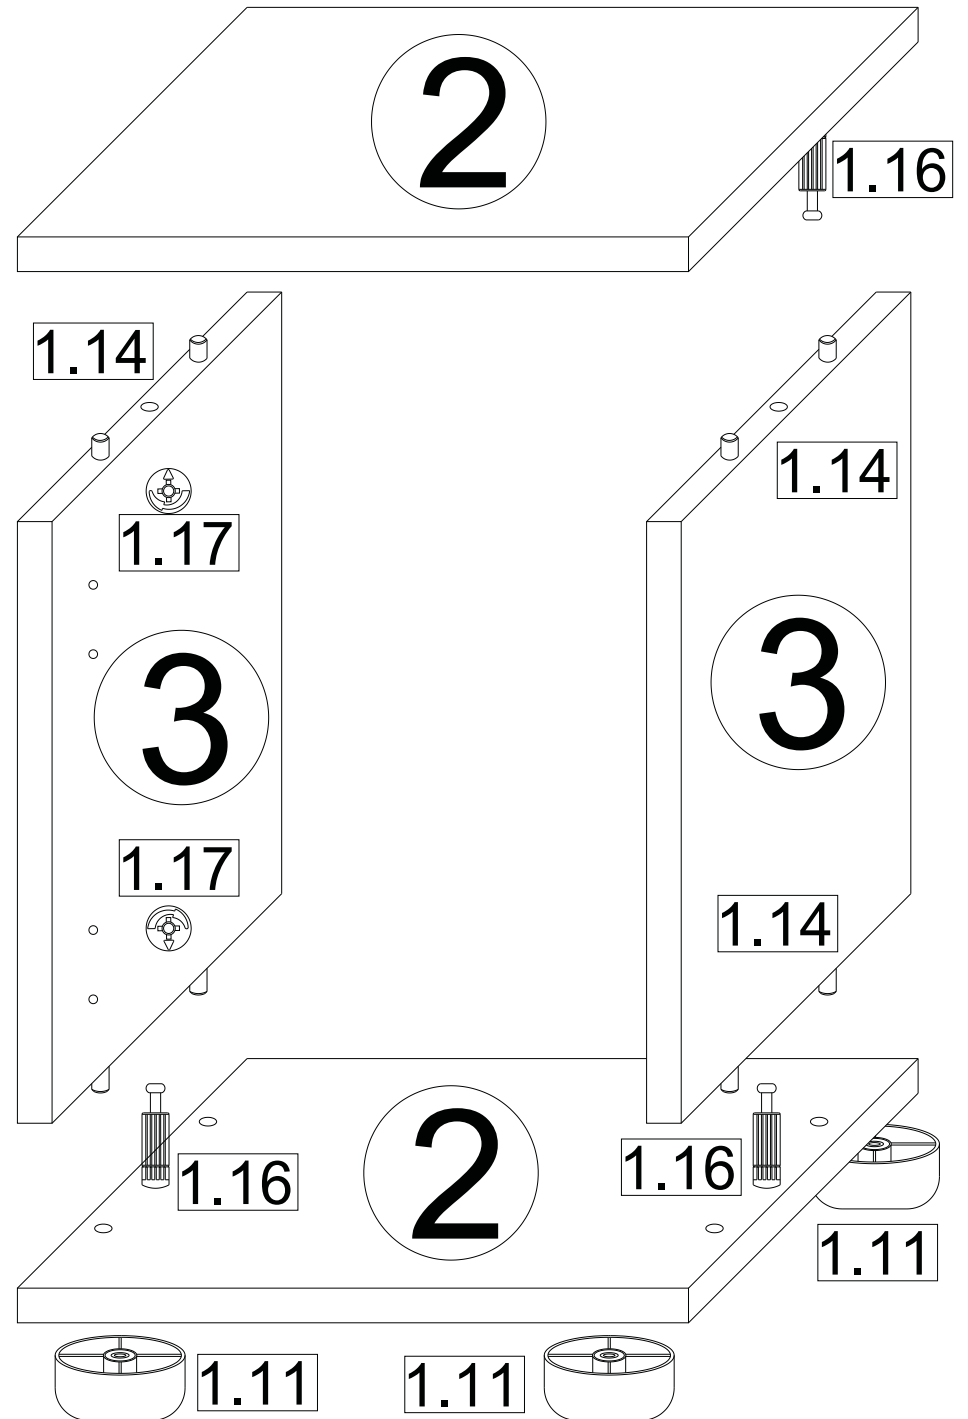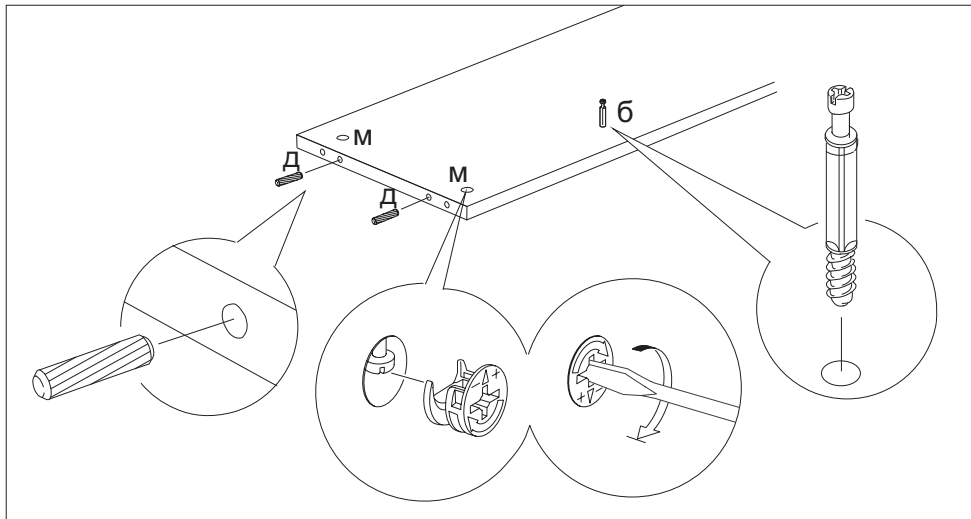

1	Beschlag		1
2	310**	296**	2
3	870**	296	2
4	280**	296	2



# VCM.



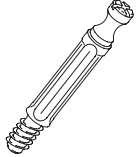




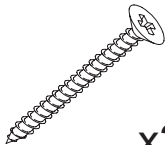
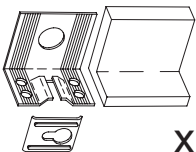
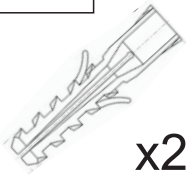
seit 30 Jahren  
 service@vcm-gruppe.de



## Aufbauanleitung

Artikel


Badset Bandola II

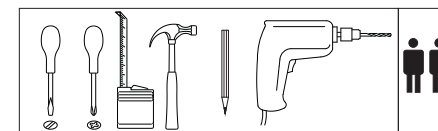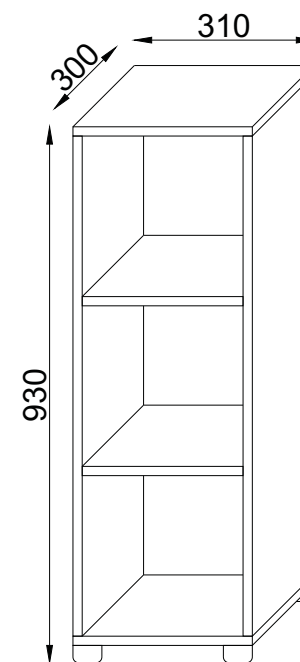
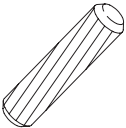
<b>1.14</b>  x17	<b>1.17</b>  x8	<b>1.16</b>  x8	<b>1.5</b> 3,5x16mm  x4
<b>1.11</b>  x4	<b>1.12</b> 4x20mm  x4	<b>1.30</b>  x8	<b>1.33</b> 4x50mm  x2
<b>1.18</b>  x2	<b>1.36</b> 8x40mm  x2		

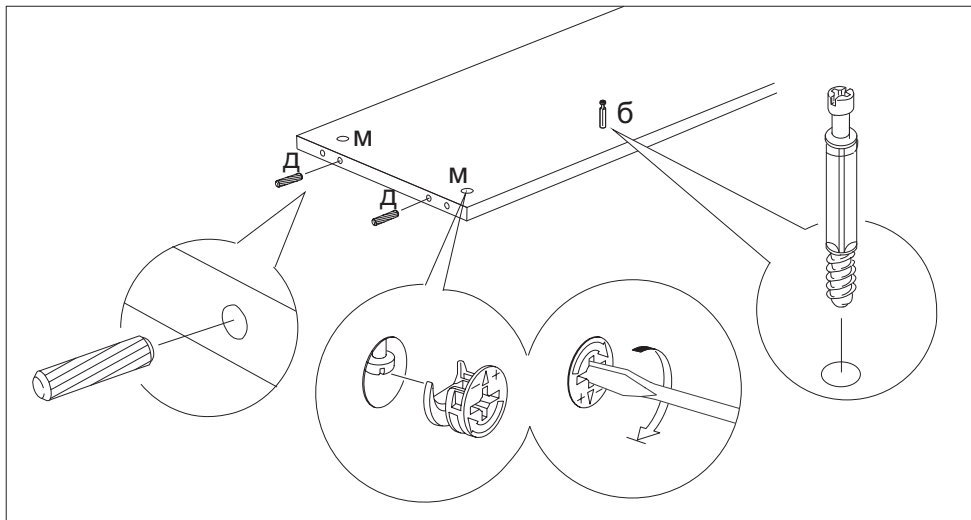

**Achtung!!!**  
Unbedingt Wandbefestigung (Teile 1.18, 1.33, 1.36) verwenden!

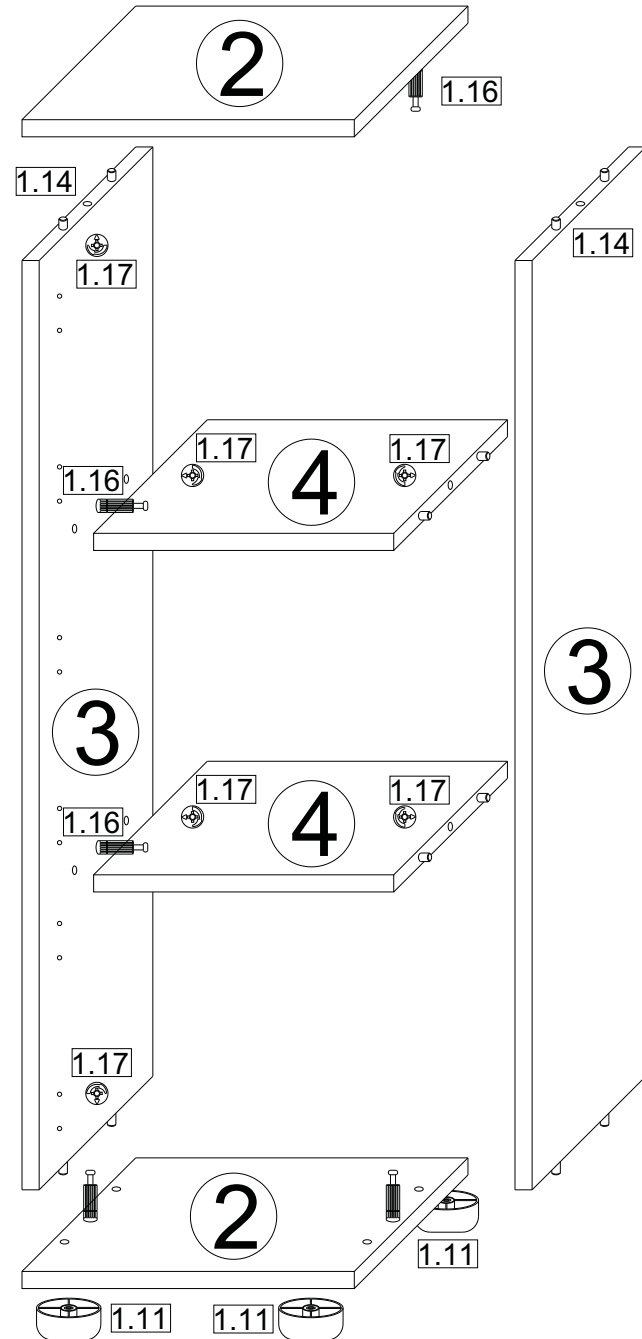



1	Beschlag		1
3	1165**	296	2
2	605**	296**	2
4	280**	296	6
5	1165**	296	1



# VCM.



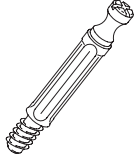
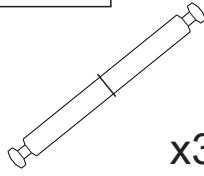




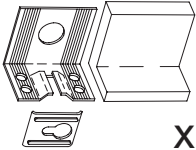
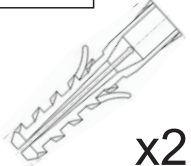
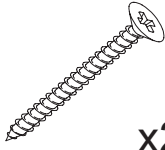
seit 30 Jahren  
service@vcm-gruppe.de



## Aufbauanleitung

Artikel

Badset Bandola II

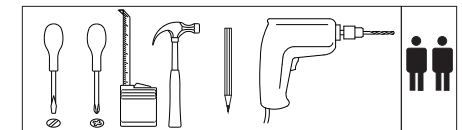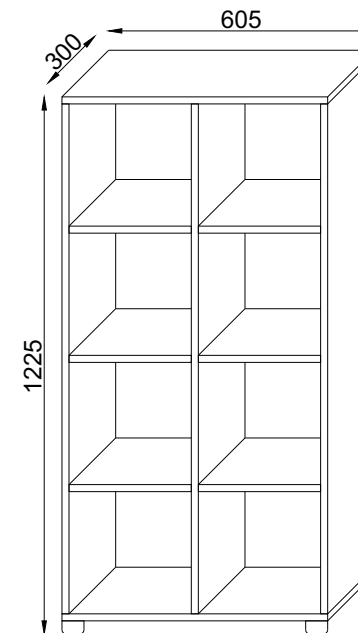
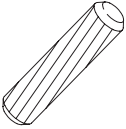
<b>1.14</b>	<b>1.17</b>	<b>1.16</b>	<b>1.31</b> 84mm
			
x38	x19	x13	x3
<b>1.11</b>	<b>1.12</b> 4x20mm	<b>1.30</b>	<b>1.5</b> 3,5x16mm
			
x4	x4	x19	x4
<b>1.18</b>	<b>1.36</b> 8x40mm	<b>1.33</b> 4x50mm	
			
x2	x2	x2	

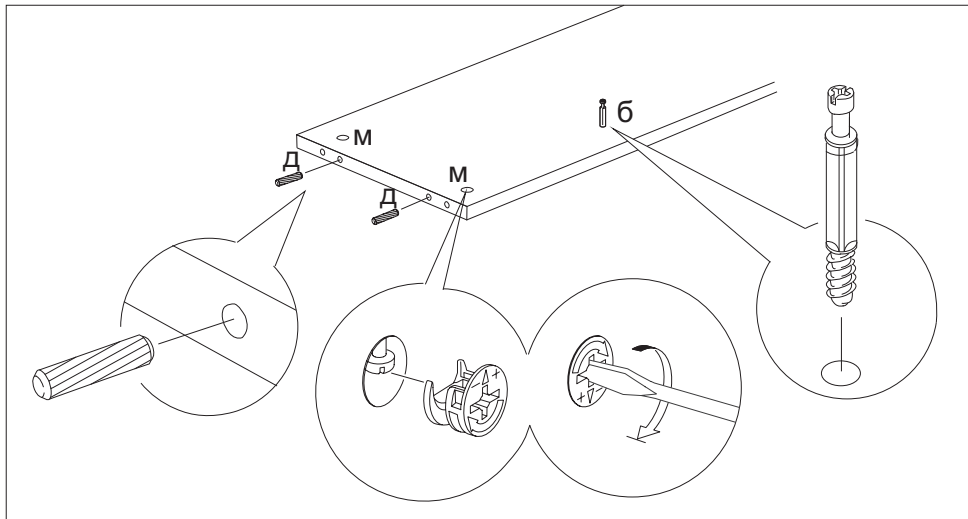

**Achtung!!!**  
Unbedingt Wandbefestigung (Teile 1.18, 1.33, 1.36) verwenden!

